

 
Start Here

EPSON Stylus® CX5200

1

Unpack

- 1** Make sure you have all the parts shown here. If any parts are missing, contact EPSON as described on the back of this sheet.

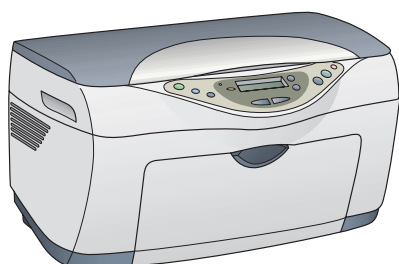


EPSON Stylus CX5200




Software
CD-ROM



 Booklet

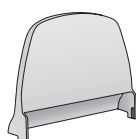


Paper support

 

USB cable




 
Ink cartridges

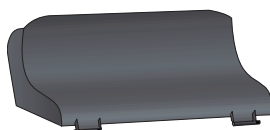

Feeder guard

2

  - Remove any tape and packing materials, as shown.

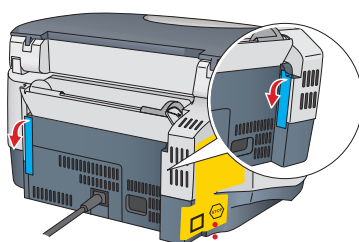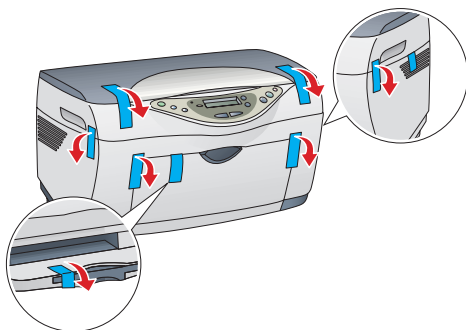


... Don't remove this sticker yet

Note: Make sure you remove all the tape. There may be packing materials or tape in different locations. Do not remove the sticker covering the USB port yet.


3

 - Lift up the entire scanner unit.

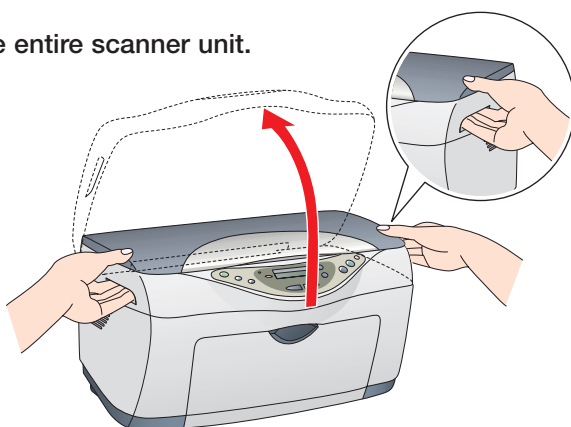


4

 - Peel off the tape from the ink cartridge holder and from the top of the printer. Make sure you don't leave any tape inside.

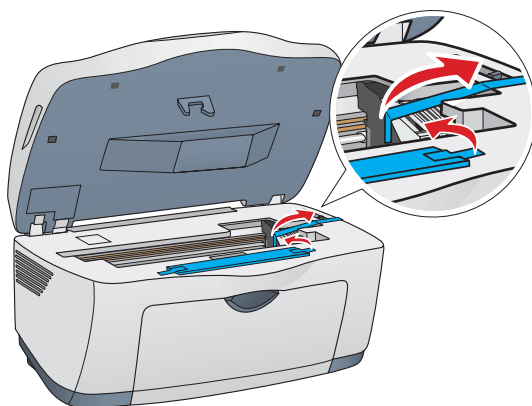

5

 
- After you have removed all the packing materials, lower the scanner unit.

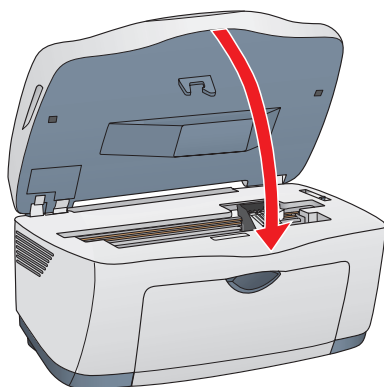

2



Unlock

 - 1 Open the scanner lid, as shown. Remove any packing materials under the lid.

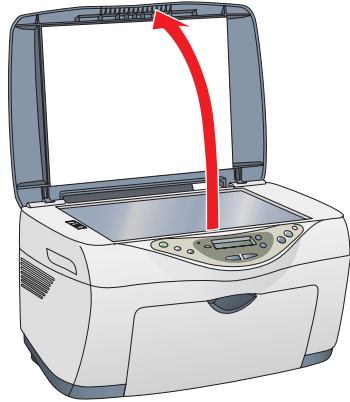

- 2 Slide the transportation lock back to the  unlock position.

  Caution: Make sure you unlock the scanner, or it won't work.

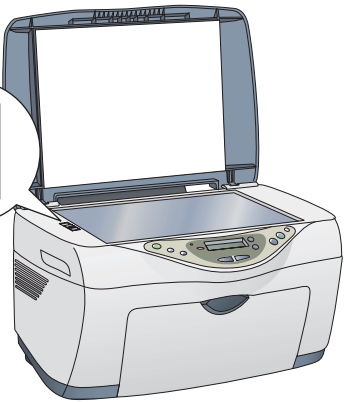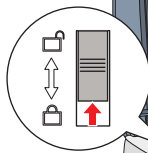


- 3 Close the scanner lid.


3

Attach the Parts

 
- 1 Insert the paper support into its two grooves.

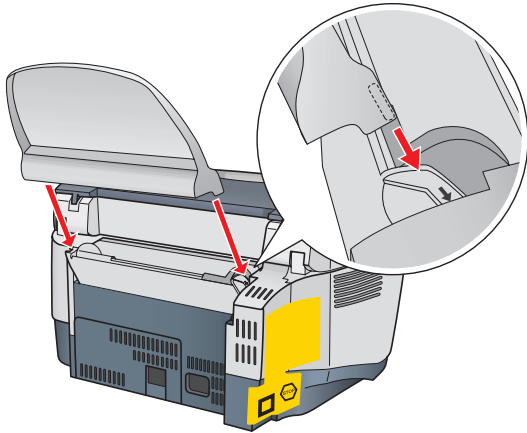

 - 2 Set the feeder guard into its two slots in front of the paper support.

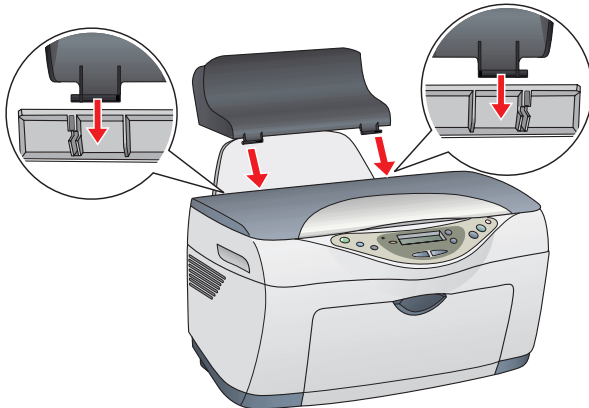

 
- 3 Open the output tray and pull out the extension.

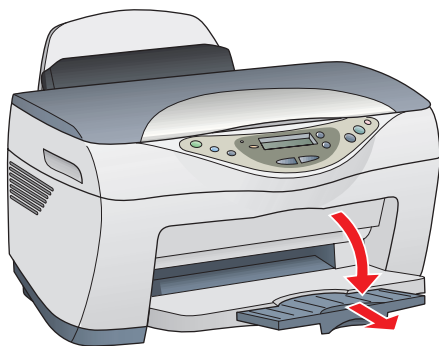

4

Plug In

 Plug the Stylus CX into a grounded electrical outlet. Do not connect the USB cable yet.

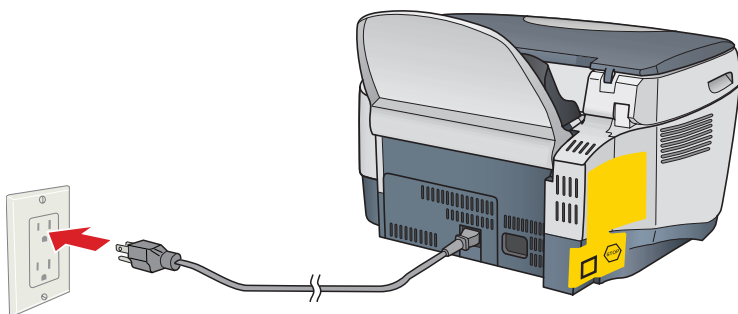


5


Install Ink Cartridges

- 1 Press and hold the **On** button for 2 seconds. The green light flashes and the scanner carriage and print head move.


 
Press the
On button

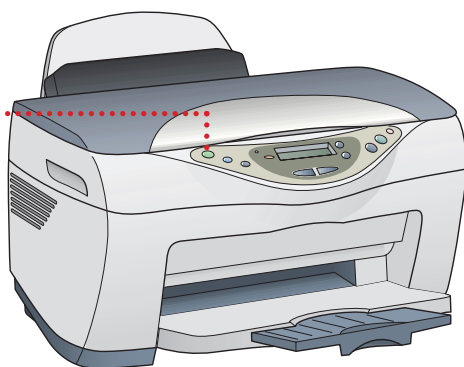

- 2 Lift up the entire scanner unit.

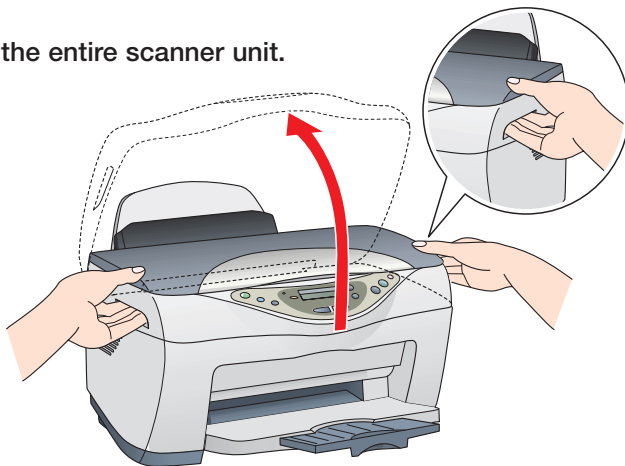 

  
- 3 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package.

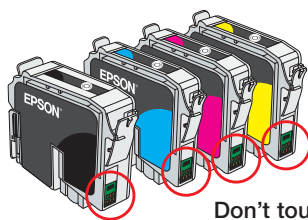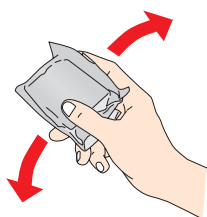


Don't touch the green part

Caution: You must install all cartridges and leave them installed for all types of printing. To avoid damaging the Stylus CX, never move the print head by hand.

 - 4 Lower each cartridge into its holder as shown.

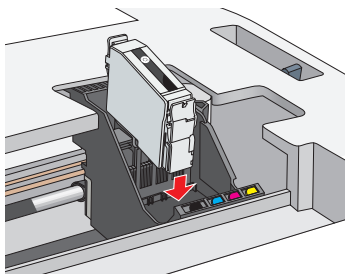


 - 5 Press down on each cartridge until it is firmly seated.

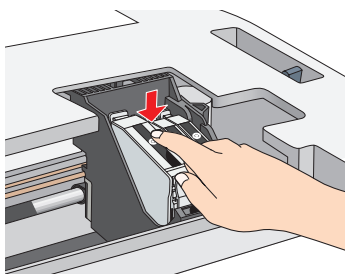

continued

 - 6** Lower the scanner unit.

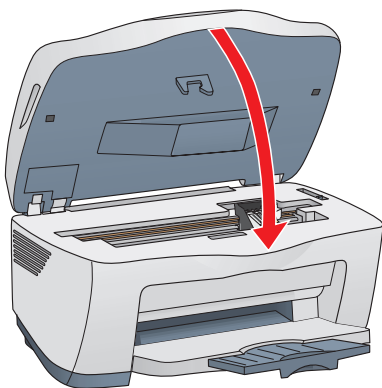


The Stylus CX begins charging the ink delivery system.


Charging takes about 2 minutes. The green light flashes and the Stylus CX makes various sounds. Don't turn it off while the green light is flashing or you'll waste ink.

6 Load Paper

 
- 1** Flip the feeder guard forward.

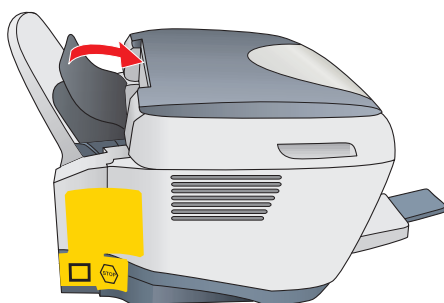


- 2** Slide out the edge guide.

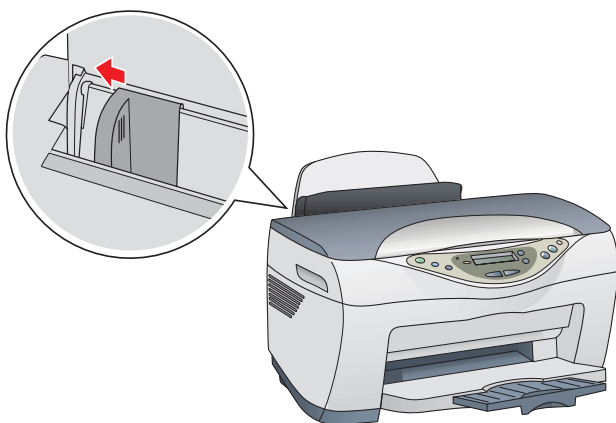 

 - 3** Place a stack of paper against the right side of the feeder, but don't push it in. Slide the edge guide against the paper.

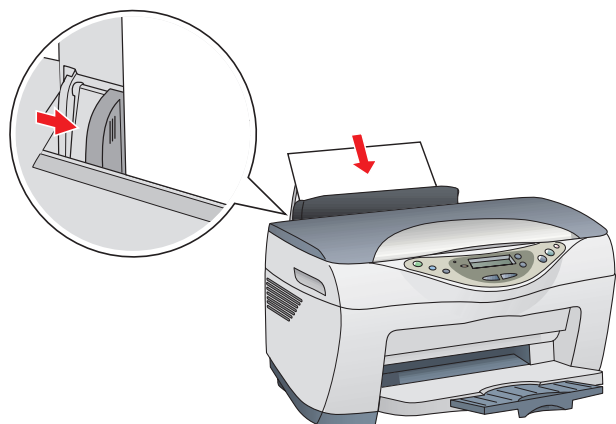

 - 4** Flip the feeder guard back over the stack of paper.

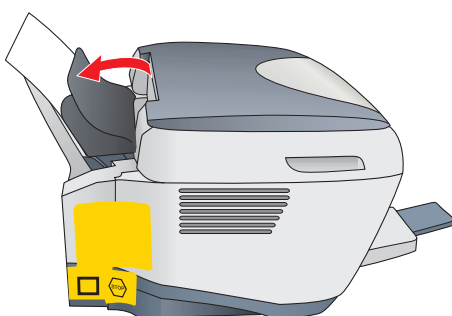


Install Software

For Macintosh® installation instructions, [see the booklet that came with your Stylus CX](#). Follow the steps below to install software for Windows.®

- 1 Make sure the Stylus CX is **not** connected to your computer, then turn on your computer.

 Note: If your Stylus CX is turned on and connected to your computer, you may see several New Hardware Wizard screens. Click **Cancel** for each of these screens and disconnect your Stylus CX. You can't install your software that way.

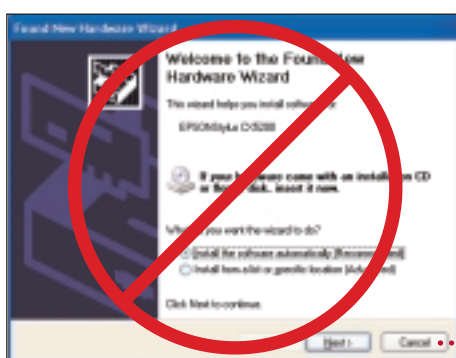

Click Cancel

- 2 Insert your Stylus CX CD-ROM in your CD-ROM or DVD drive. The Software Installation screen opens automatically.

- 3 Click **Install**.



Click Install

 
Note: If the install screen doesn't open automatically, do the following:

For Windows XP: click **Start** > **My Computer**. Then double-click the **EPSON CD-ROM** icon.

For Windows 2000/Me/98: double-click **My Computer**. Then double-click the **EPSON CD-ROM** icon.


- 4 When you see the license agreement, read it and click **Agree**. Then follow the instructions on the screen to install the drivers.

- 5 When you see this screen telling you to connect your Stylus CX, make sure it is turned on, then remove the sticker from the USB port.

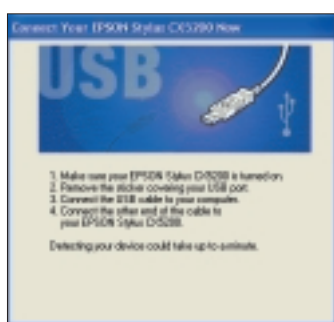

- 6 Connect the flat end of the USB cable to any available USB port on your computer.

 - 7 Connect the square end of the USB cable to your Stylus CX USB port.

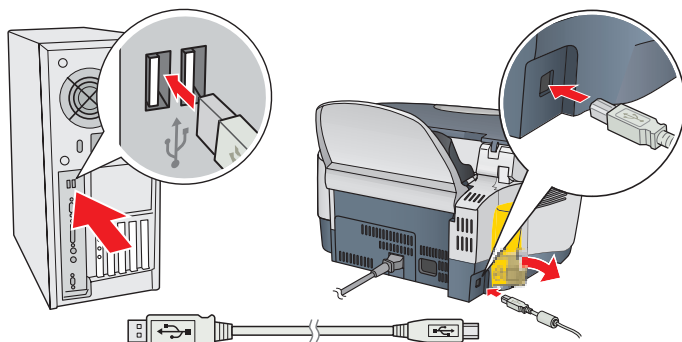

After you connect your Stylus CX, Windows displays several messages as it detects your device. If you don't see the messages, make sure your Stylus CX is turned on.

- 8 Continue following the instructions on the screen to install the rest of your software.

Note: It will take several minutes to install the remaining software. Don't cancel the installation.

continued

- 9** When you see the final screen, make sure the Stylus CX is still on and paper is loaded. Click **Print Test Page**.

Click to print
a test page



 
Note: If the test page doesn't print, see the **Solving Problems** section.

- 10** Click **Register** and follow the instructions on the screen to register your product. At the last screen, click **Done** or close your browser.
- 11** Click **Exit**, then remove the CD-ROM.

Now you're ready to copy, scan, and print. See the next section or your on-screen *EPSON User's Guide* for instructions.

Note: Your CD-ROM also includes **EPSON Software™ Film Factory™**, a photo-management program that supports **Exif Print**. If you want to install **Film Factory**, see your on-screen *EPSON User's Guide* in the **EPSON Information Center** for instructions.


Copying Documents

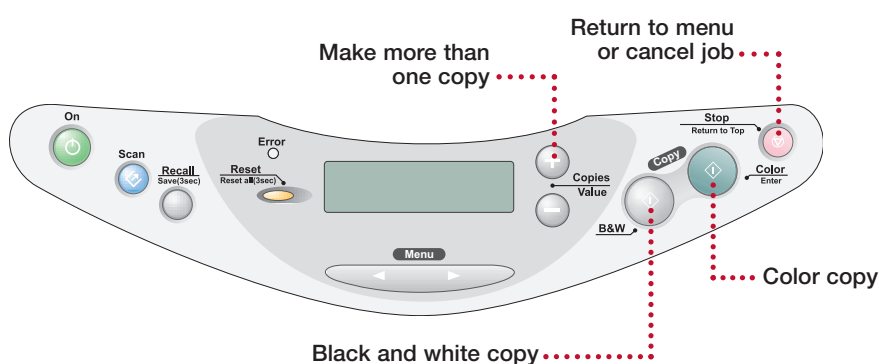


- 1** Open the scanner lid.
- 2** Place your document face-down on the glass, in the corner shown below. Move your document about 0.1 inch from the top and side edge so your entire page is scanned.



- 3** Close the scanner lid.
- 4** Press the **Color Copy** button (for color copies) or **B&W Copy** button (for black and white copies). Your document is scanned and printed.

For more information about using the buttons or printing and scanning from your computer, double-click the  **EPSON Information Center** icon on your desktop (or in the Dock on Mac OS X).

 
Copying Photographs

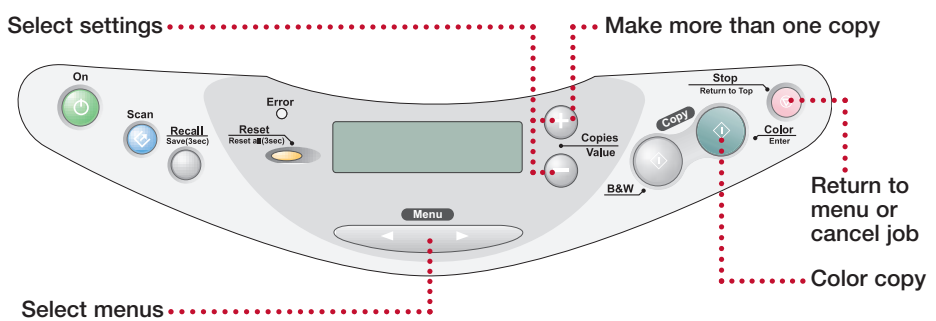

Use the or **Menu** button to select menus. Use the or button to select settings. Press to display the settings you have selected.

1 Load special photo paper short edge first and glossy side (or whiter side) up, then slide the edge guide against the paper.

 2 Place your photo face-down on the glass, with the top in the upper left corner. Move your document about 0.1 inch from the top and side edge so your entire photo is scanned.



3 Close the scanner lid.

4 Press until you see **Quality&Paper** displayed.

Quality&Paper
Plain Paper-Norm

5 Press the button until you see **Matte Paper HW**, **Photo Paper**, or **PSGP Paper** (Premium Semigloss Photo Paper), depending on which one you're using.

6 If you want to automatically resize your photo to fill the page, press until you see **Reduce/Enlarge** on the display. Then press the button to display **Auto Fit Page**.

Reduce/Enlarge
Auto Fit Page

7 Press to display your settings.

Photo Paper
Letter 10

8 Press the **Color Copy** button. Your photo is copied and printed.

For more information about using the buttons or printing and scanning from your computer, double-click the **EPSON Information Center** icon on your desktop (or in the Dock on Mac OS X).

Solving Problems

If the red **Error** light is on, check the message on the Stylus CX. Try turning the Stylus CX off and then back on. If your problem is listed here, try these suggestions. For more information, see your software Help or your on-screen **EPSON Information Center**.

The Found New Hardware Wizard appears on your screen.

Click **Cancel** and follow the steps in section 7. Disconnect the Stylus CX before installing the software.

You see an error message when you try to print or scan.

Make sure your Stylus CX is connected to your computer, plugged into a power source, and turned on.

The Stylus CX doesn't work.

Make sure you remove the tape from the ink cartridge holder, as described in section 1. Turn the Stylus CX off and then on again.

Slide back the transportation lock under the lid to unlock the scanner. See section 2.

Make sure the ink cartridges are pushed all the way down.

Make sure you're using the USB cable that came with your Stylus CX. Try connecting it to a different USB port on your computer.

Make sure your EPSON Stylus CX5200 software is installed correctly.


Paper is jammed, or doesn't feed correctly

Remove and reinsert paper. Load paper short edge first, against the right side, then slide the edge guide against the paper. Make sure the output tray is open.

Any Questions?

Here's where to look for answers:

On-screen EPSON Information Center

Double-click the  EPSON Information Center icon on your desktop to view Print Show animations and your *EPSON User's Guide*.

On-screen Help for EPSON Smart Panel™, ArcSoft™ PhotoImpression™, EPSON Software Film Factory, and EPSON TWAIN

Click the **Help** button or question mark that appears on the screen when you're using any of these programs. For Film Factory, you can also go to **Start > Programs (or All Programs) > Film Factory > Getting Started Guide**.

EPSON Technical Support

- **World Wide Web**
<http://support.epson.com>
- **Automated Telephone Services**
To use these services, you must have a touch tone telephone and call (800) 922-8911. Your EPSON SoundAdviceSM Express Code is 70430. Use this code to quickly select your product in SoundAdvice.
- **To Speak to a Technical Support Representative**
Dial (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

Software	Telephone	Fax	Internet and E-mail
EPSON Smart Panel	(510) 445-8616	(510) 445-8601	tech@newsoftinc.com
ArcSoft PhotoImpression	(510) 440-9901 8:30 AM to 5:30 PM, PT Monday–Friday	(510) 440-1270	www.arcsoft.com support@arcsoft.com

How To Get Paper and Ink

For the best prints and copies, use genuine EPSON ink and paper. You can buy them from your local store or from the EPSON StoreSM at (800) 873-7766 or www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

Look for these cartridges and paper:



T032120
Black Ink
Cartridge

T042220
Cyan Ink
Cartridge

T042320
Magenta Ink
Cartridge

T042420
Yellow Ink
Cartridge



Premium Bright White Paper
Ultra-smooth white paper perfect for everyday use—especially two-sided documents.



Glossy Photo Paper
Heavier weight paper for enlargements and snapshots. You can load up to 20 sheets at a time, glossy side up. Choose the **Photo Paper** setting.



Double-Sided Matte Paper
The ideal paper for high quality printing of brochures, newsletters, or flyers. Choose the **Matte Paper HW** setting.

EPSON and EPSON Stylus are registered trademarks and EPSON Smart Panel is a trademark of SEIKO EPSON CORPORATION. EPSON Store and SoundAdvice are service marks and EPSON Software is a trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Copyright © 2002 by Epson America, Inc. ♻️ Printed on recycled paper. 11/02

Printed in XXX